

EPOS

IMPACT SDW 30 HS

# Battery Removal Guide



DSEA A/S





Kongebakken 9, DK-2765 Smørum, Denmark

[www.eposaudio.com](http://www.eposaudio.com)

Publ. 12/21, A01

THE POWER OF AUDIO

# Battery Removal Guide

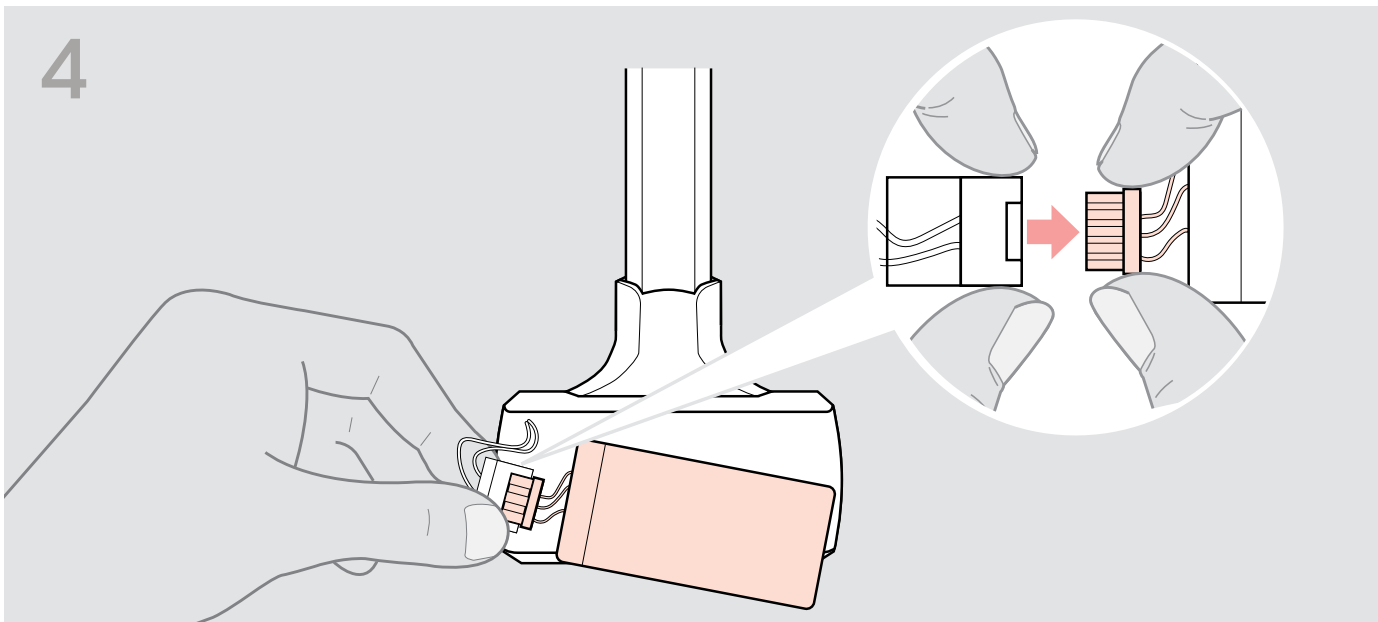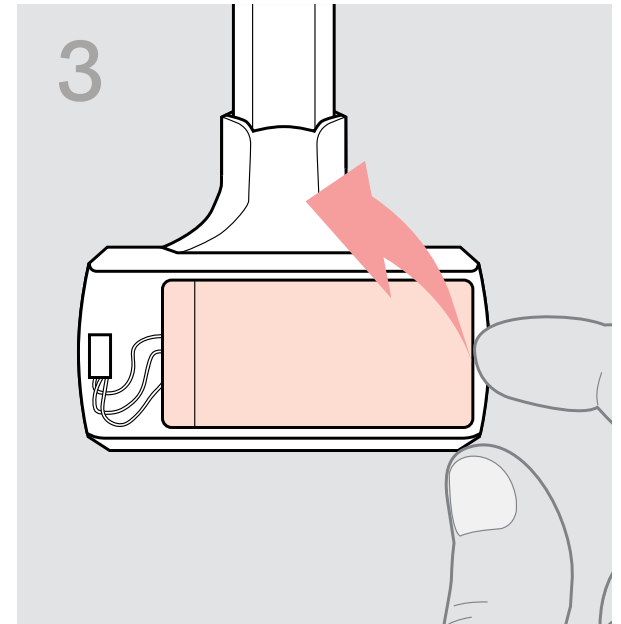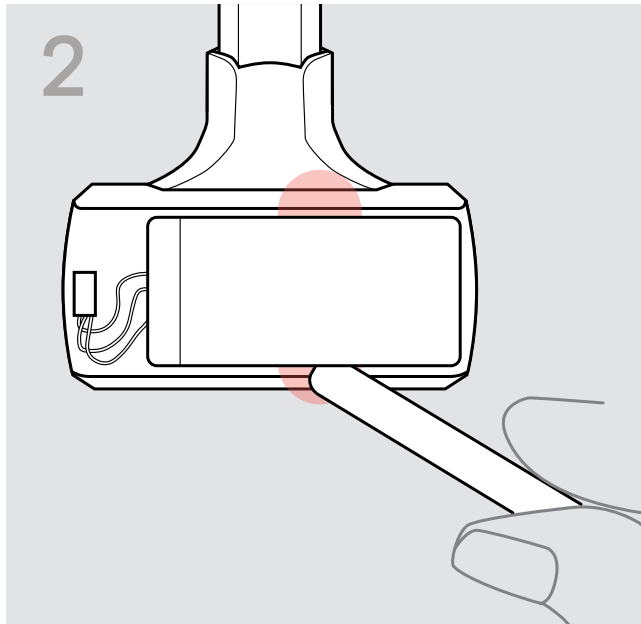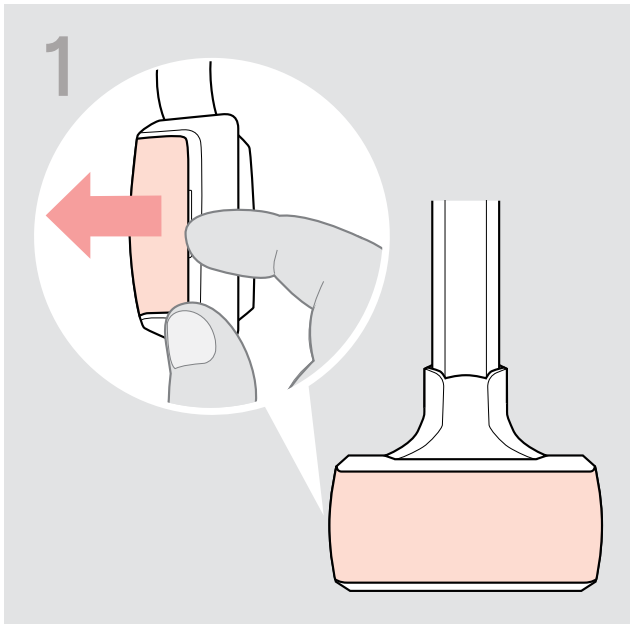

1. Slide one finger into the small recess on the side support and remove the battery compartment cover.
2. Use a plastic tool (e.g. small plastic lifting rod) to loosen the adhesive of the rechargeable battery.
3. Lift the rechargeable battery.
4. Unplug the connector and remove of the rechargeable battery.